

INSULATION ROPE for Expansion Joints INSTALLATION INSTRUCTION



- 1.) Remove all used and old insulation in the dilatation element and clean old concrete fragments on both sides.

Note: both sides of dilatation element must be completely dry and dust free; if not - there is a risk of inappropriate installation

- 2.) Apply non-combustible adhesive to the proper height (same distance as insulation rope diameter is) on both sides of the dilatation element.

* To choose appropriate Insulation Rope diameter considering the gap in the dilatation element, please refer to the table below.

- 3.) Insert Insulation Rope into the dilatation element and make sure it completely fits the part to which the adhesive is applied.

- 4.) Adhesive in the dilatation element is completely dry after 24 hours.

Opening gap width (in mm)	Insulation Rope diameter (in mm)
10	12
15	20
20	30
25	40
30	50
40	60
50	70
60	80
70	90
80	100
100	120
130	150
140	170
150	180