



ASBAND INSTALLATION CHART


Corner Guard Installation Chart

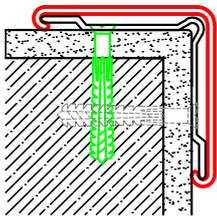


- Fastened with 3,5x40 YSB screw and dowel.
- End cap is fixed with silicone.

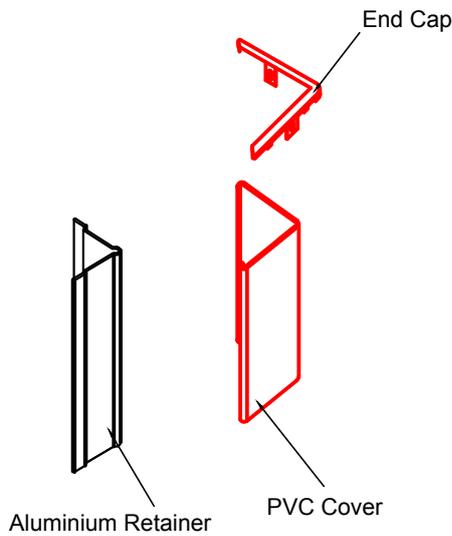


Handrail Installation Chart

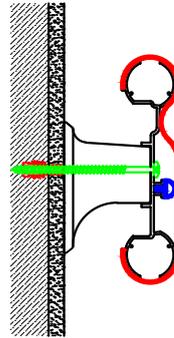

- Leveled on the wall as per the pre-drilled mounting holes.
- Brackets and aluminum retainer are fastened with special screw.
- Corners and end caps are fixed.
- PVC cover is cut and placed onto the aluminum retainer.

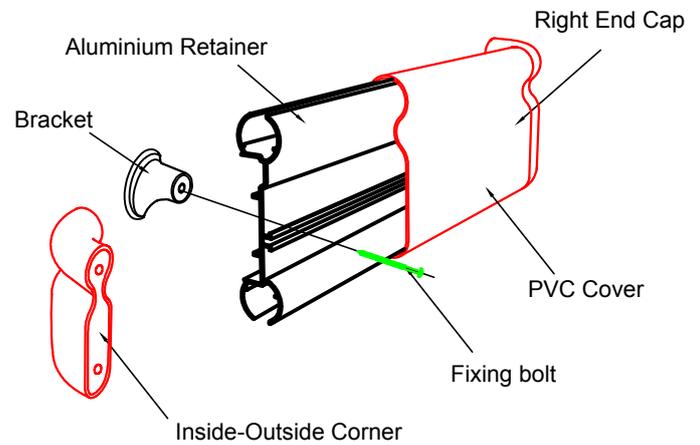

Wall Guard Installation Chart

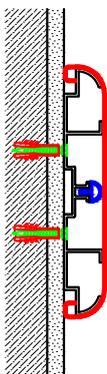

- Pre-drilled aluminum retainer is leveled on the wall.
- Mounting holes are drilled on the wall and retainer is mounted.
- Corners and end caps are fixed.
- Fastened with 3,5x40 YSB screw and dowel.
- PVC cover is cut and placed onto the aluminum retainer.

