


***INSULATION ROPES for Expansion Joint Profiles
INSTALLATION INSTRUCTIONS (2 ROPES APPLICATION)***


1. Clean the dilatation element and assure it is dust-free.




2. Screw the stainless steel holders to the side of the concrete. Make sure that holders are installed every 50 cm on each side. Holders should be cross-fixed assuring the support for Insulation Ropes practically every 25 cm.

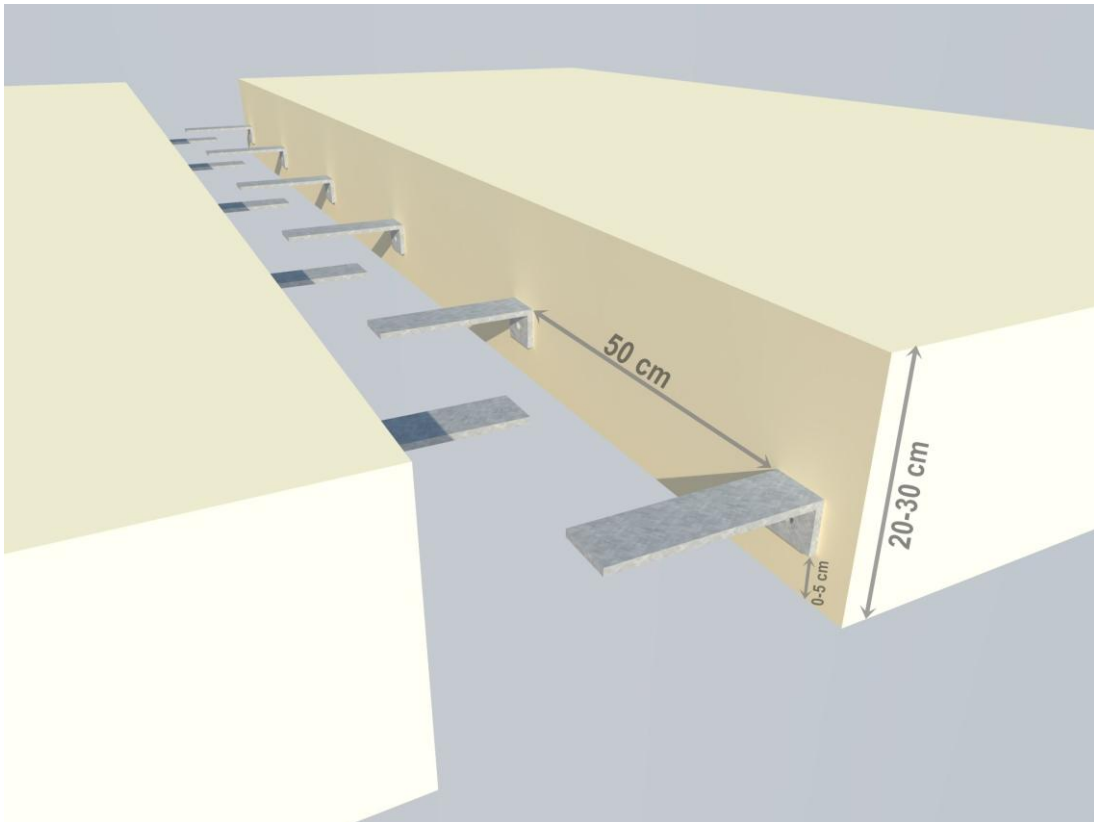

- 3. Apply non-combustible adhesive to each side of the dilatation element before inserting the Insulation Ropes. Make sure that adhesive is applied in those parts, where Insulation Ropes will touch the concrete.

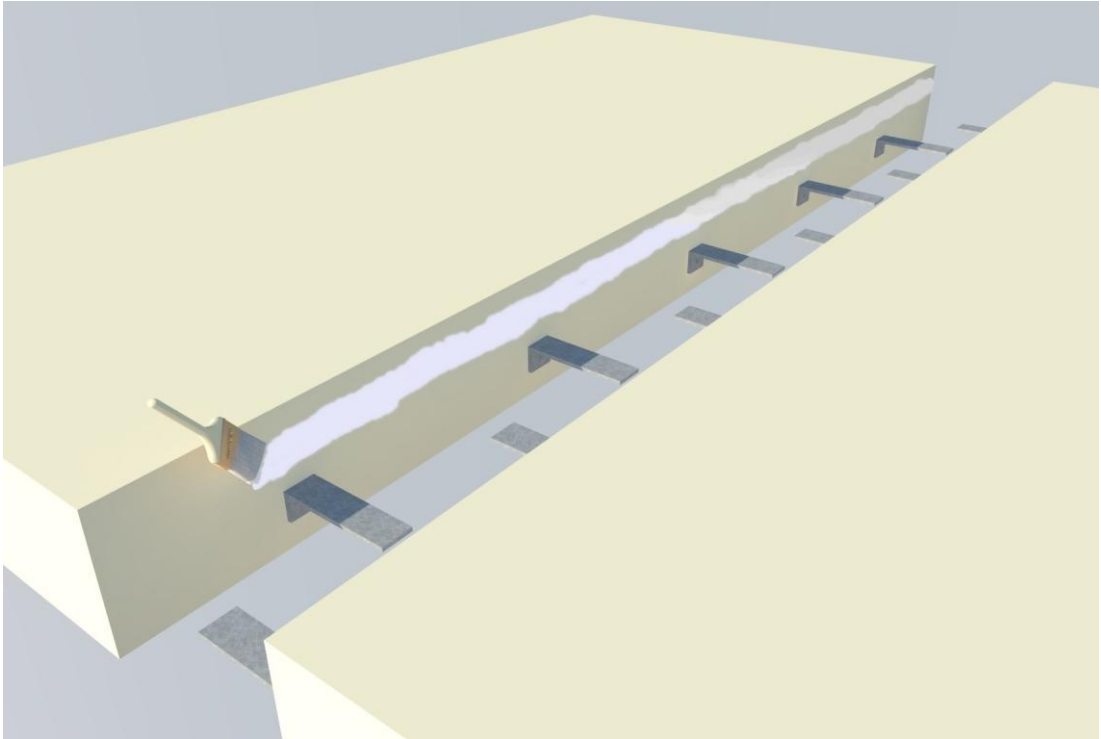

- 4. Take the Insulation Ropes, insert them into dilatation element and make sure they completely fit the part, where adhesive is applied.

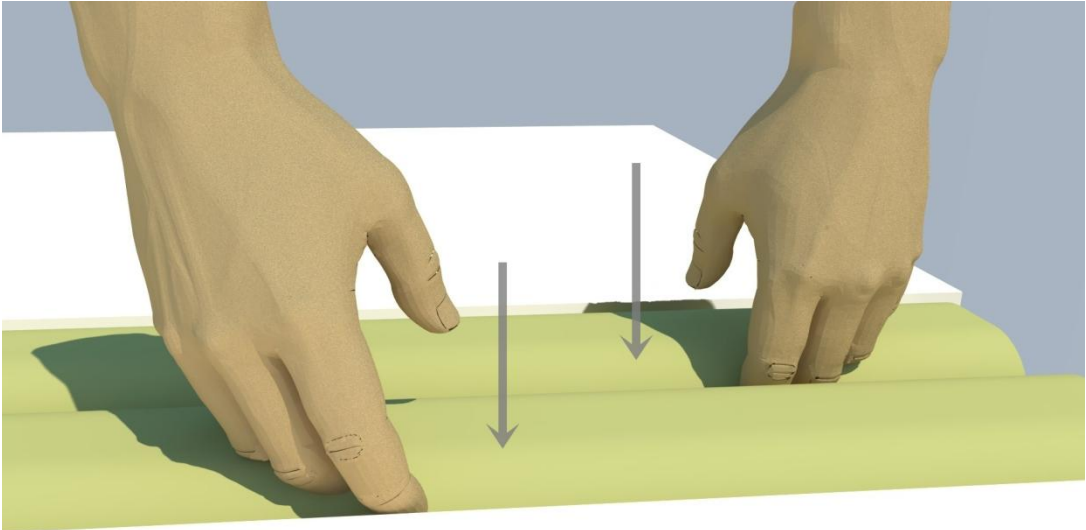

5. Complete installation

